


PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013



O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

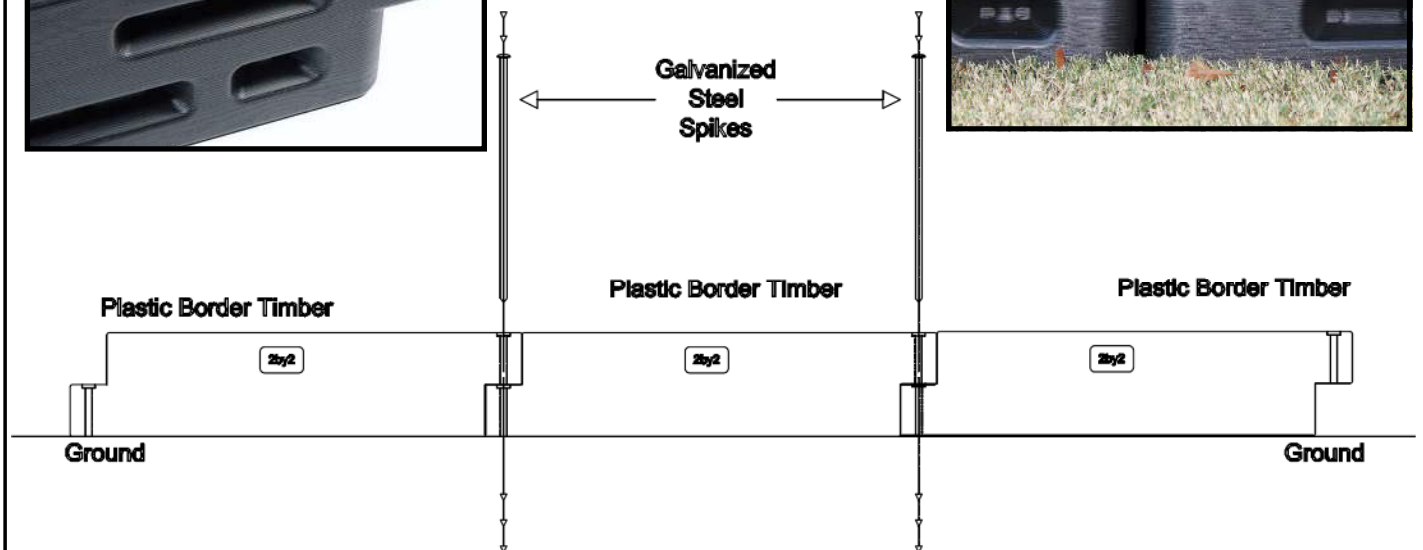

Border Timbers

INSTALLATION INSTRUCTIONS

Here are four easy steps to complete the installation of your new Border Timbers from 2by2 Industries:

1. Make sure the countersunk holes are ON TOP of the borders and the label is correctly oriented to read. Choose the desired pattern (wood-grain or textured) to face outward.
2. Place the borders in the desired location and place them in a manner so the “over” portion lines up with the “under” portion of the next border timber in line. Run your spike through the holes that will line up with each other. **DO NOT HAMMER THE SPIKE INTO THE GROUND AT THIS TIME.**
3. Complete the circuit of borders in their desired location. Please make sure you are following all ASTM and CPSC recommended safety zone guidelines for the placement of the border timbers.
4. Using a sledge hammer, hit the spikes into the ground all the way until the button-head touches the border timber within the countersunk portion of the border timber. Do not hit the spike so hard the border timber loses its shape.